



closer to nature® perfect prep™ machine

INSTRUCTIONS FOR USE



FOR DOMESTIC USE ONLY - NOT INTENDED FOR COMMERCIAL USE NOTE: SET UP YOUR UNIT IN A COOL PLACE IN YOUR KITCHEN OUT OF DIRECT SUNLIGHT

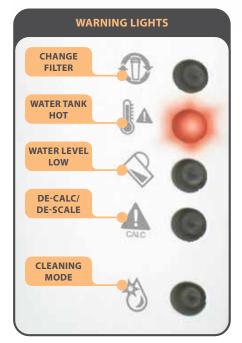

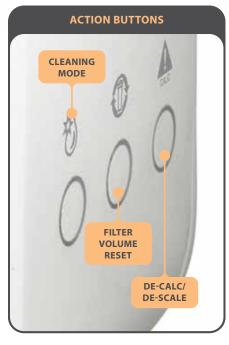

Mayborn ANZ Pty Ltd. (ABN 66 154 703 134)

Mayborn Group is a business name of Mayborn ANZ Pty Ltd.



Place a container under the dispenser outlet to capture the water used to clean the system (at least 1 litre capacity).



Plug in the unit, the tank empty warning light will illuminate.



With the water hopper in place (but not the filter) fill the hopper with 1 litre of freshly boiled **HOT** WATER -



Wait for the tank empty warning light to go out. The water tank hot light will illuminate.



Press the cleaning mode button and hold for 2 seconds. The cleaning mode light will illuminate.



Wait whilst the boiled water is emptied from the tank, through the dispenser, into the container that you placed under the outlet in step 1.



The tank empty warning light will illuminate once the water has flushed through the system.



Discard the water captured in your container and replace it under the dispenser.

9a

- *Handling the filter cartridge by the top only:
- Remove the filter cartridge from packaging
- Remove sticker from the top of filter
- Fill a bowl with cold drinking water
- Fully submerge the cartridge in the water
- Gently agitate until the bubbles cease



Remove the water hopper and fit the filter*.

Replace in the water tank.



Fill the hopper with **COLD WATER**.



Wait for the tank empty warning light to go out.



Press the start/stop button. A red light will flash.



The appliance will dispense an amount of hot water.



Press the start/stop button again. A green light will flash and an amount of water will be dispensed to finish the cycle.



Press the filter volume reset button for 2 seconds to clear the memory. Discard dispensed water.

Your system is now ready to use.



Check the water level and top up if necessary with **COLD WATER**. When filling the tank, you must always fill the hopper and as the water passes through the filter you can regularly top it up.



Turn the dial to select the feed size you require (120ml - 330ml).



Position your sterilised bottle under the dispenser. Adjust bottle stand if necessary. (Bottle neck should sit close to the outlet).



Press the start/stop button. A red light will flash and a volume of **HOT WATER** is dispensed into your bottle.



The light will change to solid red and there will be a double beep to indicate the end of the first stage. You will need to make up your feed within 2 minutes.



Carefully remove the bottle from the stand and measure the correct number of formula scoops into the bottle.



Screw the sterilised milk storage lid onto the bottle and ensure that the lid is tight. Be careful when handling hot liquid.



Shake well until the formula powder has dissolved.



Remove the milk storage lid and replace your bottle onto the bottle stand.



Press the start/stop button again. The red light will go out and the green light will flash. If this button is not pressed within 2 minutes of the hot water being dispensed a long beep will sound. If the alarm sounds you should discard the feed and repeat the process from step 1.



Wait whilst the remainder of water is dispensed. Once completed, there will be a double beep and the green light will change to solid.



Always check that the amount dispensed is consistent with the size of feed you have selected on the dial. Add the sterilised teat, screw ring and hood and shake.



For your child's safety always check food temperature before feeding by testing on a sensitive



Your bottle is now ready to serve. Make sure you discard any unwanted feed as per the formula manufacturers recommendation.

HOW TO STOP THE PERFECT PREP™ MACHINE

If at any point you need to stop the perfect prep™ machine you can do so by pressing the start/stop button. The pump may continue to run for a few seconds and the green light will illuminate to show that the process has ended. It will not be possible to restart the machine for 20 seconds. Should you have to stop the perfect prep™ machine please discard of any feed.

HINTS AND TIPS

For a cool tank keep the unit out of direct sunlight and away from sources of heat. Fill with **COLD WATER** from the fridge. Regularly top up with **COLD/COOLED WATER**.